

FIRE ALARM FAN MODE

Enter pin 2000.

(Operations) > Unit > Fire > Fire alarm 1 or 2 > Fire alarm X fan mode > choose fan mode > Fire alarm X supply/exhaust fan output > set output signal.

Note that if you choose fan mode Stop, the output signal does not apply.