

Fans are not running

Check power supply, preferably on the frequency converter.

Password enter 2000

(-V4.22) Mainmenu – Unit – Modbus supplyfan/Modbus exhaustfan

(V4.24-) Unit – Fans – Supply-/Exhaust fan

Look for values in the menus, especially Motor temp, if it says 0.0°C, communication is probably lost.

Check the cables between the controller and fans and the Modbus-terminals.