

DEVIATION ALARM FAN.

Check alarm limits, when you change control mode it is easy to forget to adapt the deviation alarm.

Enter pin 2000

(Operations) > Unit > Settings air flows > Sply fan/Exh fan deviation > check Max dev and Min limit