

## COMMUNICATION ALARM FAN

Make sure that there is correct power supply to the fan, check the circuit breaker and measure on the frequency converter. Also measure the incoming power supply.

Enter pin: 2000

(Operations) > Unit > Fans > Supply/Extract air fan

Check if there are values in the menus. Check especially Motor temp, if it says 0.0°C on any of them, it indicates lost communication.

Check the wiring between the controller and fan as well as the Modbus terminals in the control cabinet.