

## SETTING THE TIME SCHEDULER

Tips and tricks on setting the time scheduler:

The time scheduler is arranged to point to a time when the unit shall change its state.

Every day begins with 00.00. Do NOT change this time, but change the value (Off, Stage 1, 2 or 3) to the state unit shall be in when the day begins.

To save time, note that the schedule for Monday can be copied to other days.

For example: You want the unit to go on Stage 2 between 05.15 and 19.30 all weekdays. Enter Monday in the time scheduler (see below).

Time 1 says 00.00, do not change this time! and Value 1 is set to Off. Change Time 2 to 05.15 and Value 2 to Stage 2. Time 3 should be changed to 19.30 and Value 3 to Off. Press ESC to leave Monday and choose Copy schedule and Tu to Fr. Check that all values on Saturday and Sunday is set to Off.

Do not use the function Continuous run for around the clock operation, but set all values to the fan stage you want.

Enter pin 2000.

(Operations) > Unit > Time scheduler > Weekly schedule > choose Monday > set times for fan stage and shutdown.