

## **STF-05 PRESENCE SENSOR**

The unit is equipped with a presence sensor for external control.

It is typically used to start the unit outside normal operating hours, for example, to boost ventilation in meeting rooms or similar spaces.