

## STE-08 DX-COOLING 1 STEP

Climatix is configured to control an external cooling machine as follows:

- **Potential-free output** for starting the cooling machine. (Max 230V/2A)
- **0–10V** control signal, where 10V means full cooling operation.
- **Alarm input** from the cooling machine.