

STD-19 FROST PROTECTION PREHEATING

Artikelnummer	Givare
STD-19-1	Frost protection sensor (clamp-on)
STD-19-2	Frost protection sensor (immersion)
STD-20-1	Water supply sensor (clamp-on)

Preheating coil (water) is fitted with frost protection sensor. The frost protection sensor protects the coil by keeping the coil tempered using two setpoints, one for when the unit is running and on for when the unit is in standby. If risk of freezing still is still at hand the unit shuts down.

Frost protection sensor is to be fitted on the return water pipe (the coldest point).