

## STD-13-1 REVERSIBLE COOLING/HEATPUMP CONTROL WITHOUT PRE-HEATER

Climatix is configured to control a reversible cooling/heatpump as follows:

- **A potential free digital output** to determine cooling or heating mode. Closed during heating.
- **0-10V analog output.** 10V indicates full heating or cooling while 0V indicates neither heating nor cooling.
- **Aux alarm** from the cooling/heatpump.

In case you have a reversible cooling/heatpump together with other additional heating, these will be placed after in the heating sequence. They are to be configured as *"Heating"* or *"Electrical heating 2"*.