

STH-D1T-... FIRE DETECTION VIA TEMPERATURE

The unit can be fitted with fire thermostats, or you can use the unit's on-board supply and/or extract air sensors for fire detection. If the temperature exceeds the fire alarm temperature limit, Fire alarm 1 is triggered.

STH-D1T-10	Supply air temperature sensor. If the temperature exceeds the fire alarm temperature limit, Fire alarm 1 is triggered. Default: 70°C
STH-D1T-11	Fire thermostat in supply air duct. RAK-ST
STH-D1T-20	Extract air temperature sensor. If the temperature exceeds the fire alarm temperature limit, Fire alarm 1 is triggered. Default: 50°C
STH-D1T-21	Fire thermostat in extract air duct. RAK-ST